

THE MIXER

1. channel fader - adjusts the audio level on the corresponding channel in the software.
2. crossfader - blends audio between the channels assigned to the left and right side of the crossfader.
3. master volume - adjusts the output volume of the program mix.
4. booth volume - adjusts the output volume of the booth output mix.
5. headphone mix - blends the pre-fader audio playing on channels 1 and 2, sliding this to the left plays channel 1, sliding to the right plays channel 2.

